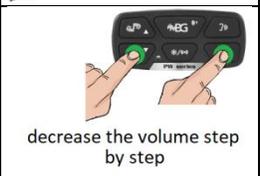
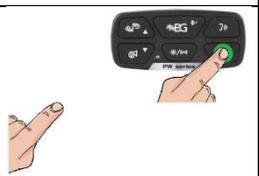
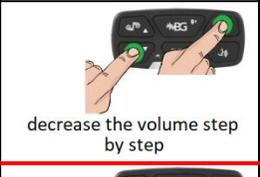
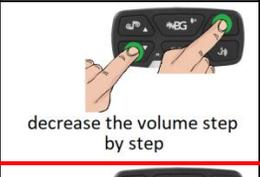


PW line – B&G electronics

<p>PTT</p> <p>To speak to the outside of the vehicle. Active while the key is pressed.</p>					
<p>INTER</p> <p>To listen what is happening in the outside. Function that turns ON and OFF when the key is pressed.</p>					
<p>SIREN</p> <p>Turn on the selected siren, WAIL, PHASER, HI-LO or YELP. Function that turns ON and OFF when the key is pressed.</p>					
<p>MANUAL WAIL</p> <p>The tone of MANUAL WAIL sounds. Pulsating siren. Active while the key is pressed.</p>					
<p>HORN</p> <p>The tone of the chosen HORN sounds. Pulsating siren. Active while the key is pressed.</p>					
<p>AUX/SIREN</p> <p>In AUX mode turns on the connected lights. In SIREN mode turns on the auxiliary siren.</p>					
<p>AUX → SIREN</p> <p>Change the AUX mode to SIREN mode so the auxiliary siren sounds.</p>		 <p>4 seconds until listening BEEP</p>			
<p></p>					
<p>SIREN → AUX</p> <p>Change the SIREN mode to AUX mode so the connected lights turn on.</p>		 <p>4 seconds until the siren turns off and restart</p>			
<p></p>					

PW line – B&G electronics

<p>Choose SIREN Select the SIREN sound between WAIL, PHASER, HI-LO and YELP.</p>		 <p>4 seconds until the siren turns off and restart</p>		 <p>press HORN until you find the expected sound</p>	
<p>NOTE: The auxiliary siren is changed in the same way as SIREN. You cannot select the same sound that SIREN has.</p>	 <p>press HORN until you find the expected sound</p>				 <p>www.byg.com.co</p>
<p>Choose HORN Change the HORN. Go from HORN ByG to American HORN and vice versa.</p>			 <p>4 seconds until it changes</p>		
<p>Autoadjust PTT Adjusts the maximum allowed volume of the PTT so there is no feedback.</p>			 <p>4 seconds until listening BEEP</p>		 <p>wait until you hear BEEP</p>
<p>PTT volume adjust Increase or decrease the PTT volume.</p>			 <p>increase the volume step by step</p>		 <p>increase the volume step by step</p>
<p></p>		 <p>decrease the volume step by step</p>		 <p>decrease the volume step by step</p>	
<p>INTER volume adjust Increase or decrease the INTER volume.</p>			 <p>increase the volume step by step</p>		 <p>increase the volume step by step</p>
<p></p>		 <p>decrease the volume step by step</p>		 <p>decrease the volume step by step</p>	
<p>Link Lights with SIREN If the lights are linked, turning on the siren will turn on the lights.</p>		 <p>4 seconds until listening BEEP</p>		 <p>2 BEEPs linked 1 BEEP unlinked</p>	
<p></p>			 <p>www.byg.com.co</p>	 <p>www.byg.com.co</p>	 <p>www.byg.com.co</p>

NOTES:

If the INTER is ON, the PTT will sound lower. (PTT Inter Mode).

If the battery voltage is too low, the equipment does not turn on. (The keyboard flashes 3 times).